





# Quad Door Panel Astragal Installation Instructions


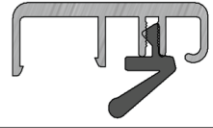



## Equipment Needed


- Hammer
- Measuring Tape
- Block of Wood
- Screw Driver

## Parts List

- Interior Astragal (1) : Wood 
- Exterior Astragal (1) : Clad – Aluminum   
Prime – Wood 
- #8 x 1 1/2" Flat Head Screws (12) 

PROFILE	FINISH	CALL OUT	PART #
	PINE	6-10	220168
	PINE	8-0	220169
	ALDER	8-0-A	220169-A
	FIR	8-0-F	220169-F
INTERIOR ASTRAGAL WEATHERSTRIP			8046-1
	MILL	8'4"	8249-1
	EXTERIOR ASTRAGAL WEATHERSTRIP		2384100
	INTERIOR ASTRAGAL SCREWS	#8 x 1 1/2" FLAT HEAD	8091

\*Note: Astragal instructions should occur after adjusting rollers on door panels\*

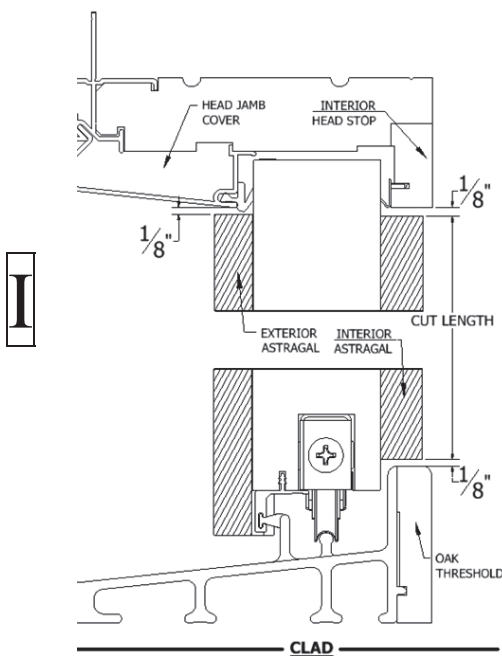


## INTERIOR ASTRAGAL

1. Interior Astragal is Pre-Cut to length


## EXTERIOR ASTRAGAL

1. Exterior Astragal is Pre-Cut to length

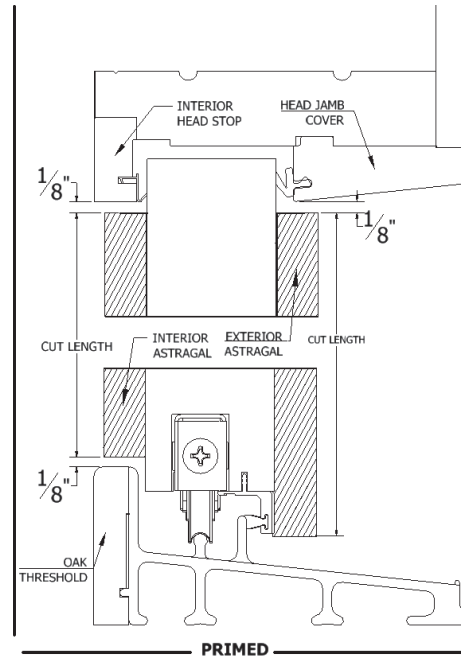

## CLAD (EXTERIOR)

1. Place the Exterior Astragal over the Astragal Bracket in the location shown in Section I.
2. Starting from the bottom, working your way to the top, place a block of wood on the face of the Exterior Astragal and tap with a hammer until it snaps in place.

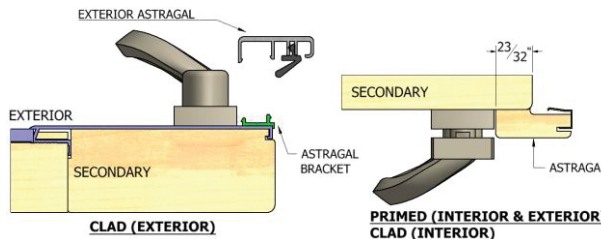

## PRIMED / CLAD (INTERIOR)

1. Place the wooden astragal in vertical location shown in Section I.
2. Align the astragal 3/4" from the edge of the stile (Shown on left).
3. Secure astragal by following Section 3, shown below.



## SECURING ASTRAGAL

1. Position the astragal as stated in Sections I and II.
2. Using #8 x 1 1/2" flat head screws found in the hardware bag, install screws 10" apart along the length of the astragal 3/8" from the edge of the astragal (Shown on right).

