

Wood Products with 2" & 4" Field Mull Spread Installation Guide

IG-046 REV. 08/23 1.2



Wood

Scan Here for a Digital Version of the
Installation Guides in English.


Quartz Luxury Windows & Doors:
www.quartzluxurywindows.com



Wood

Scan Here for a Digital Version of the
Installation Guides in English.

Quartz Residential Windows & Doors:
www.quakerresidentialwindows.com

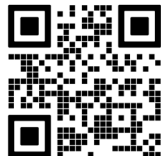

Wood

Scan Here for a Digital Version of the
Installation Guides in English.

Quaker Commercial Windows & Doors:
www.quakercommercialwindows.com



Para ver las instrucciones en Espanol, escanea aqui.

If this set of instructions does not match your installation method or the wall conditions of the job site, please check our website listed below for other options, or call Quaker Customer Service for additional information.



Quaker Window Products
504 U.S. Hwy 63 South
Freeburg, MO 65035
(800) 347-0438
www.quakerwindows.com



PO Box 128

| 504 Highway 63 South

| Freeburg, MO 65035

| 800-347-0438

| 573-469-4151 (fax)

Installation Guidelines for all Wood Quaker products with Field Spread Mull (2" and 4")

Read these instructions completely before starting any installation. Failure to install and maintain our product according to these instructions may void any product warranty. Please visit our website at www.quakerwindows.com or call 1-800-347-0438 for additional information.

Tools required by installer:

Safety Glasses



Utility Knife



Drill/Driver



Caulk Gun



Level



Tape Measure



Hammer



Pliers



Materials required by installer:

Foam
Backer RodMinimally
Expanding FoamShims
(Waterproof)

Sealant



Fasteners



IPA Alcohol



WARNING

Tools

- Follow manufacturer's instructions for safe operation of tools, and ladders/scaffolding. Always wear safety glasses. Failure to do so could result in injury, product or property damage.

Handling

- Do not store units outside, or in a hot environment. Doing so could result in product damage.
- Do not carry flat.** Doing so could result in product damage, injury, or property damage.
- Stack units as straight as possible to avoid bowing. **Do not lay flat!**

Glass

- If broken, glass can fragment causing injury. All Quaker products are available with safety glass. In many areas, local building codes require safety glass in certain locations and/or applications. Unless safety glass is ordered, Quaker windows are not provided with safety glass. Before ordering, consult your local building codes for more definitive information.

Fastening

- Metal fasteners and components could corrode when used with preservative-treated lumber. Use approved fasteners and components to fasten window or door. Failure to do so could cause a failure resulting in injury, product or property damage.
- Fastener must attach to a structural framing member with 1 1/2" minimum fastener embedment, or minimum 3 full threads with a minimum 5/16" head as products were tested with.
- Quaker does not supply anchorage/fastener calculations, and is not responsible for determining structural adequacy of the anchorage and fasteners used to install our products, or the openings into which they are installed.**
- Do not** over drive screws or nails. Doing so could result in product damage.

 CAUTION
Installation

- Always support window or door in opening until fully fastened. Failure to do so could result in the window or door falling out or causing injury, product, or property damage.
- Nailing flanges and drip caps (integral or applied) **do not** take the place of window flashing. All windows and doors must be properly flashed and sealed with material compatible sealant for protection against water and air infiltration around the entire perimeter. Failure to do so could result in product or property damage.
- **Do not** set window directly on sill plate. Place shims under the side jambs. Window or door must be properly shimmed. Failure to do so could affect operation and product performance and could result in product damage.
- Live or dead loads transferred into our product can affect functionality, damage frame joinery or cause glass failures. Dead loads such as upper levels, roof, etc. Should be constructed before window or door is installed.
- Loads shall be designed to withstand the most critical effects of load factors and load combinations as required by the building code. (Loads are including but not limited to Live, Dead, Collateral, Auxiliary, Thermally induced, Seismic, etc.)
- Maximum vertical deflection of the header under all Load combination should not exceed the Span/720 or 1/4" whichever is less.
- Windows and doors have small parts. Small parts if swallowed could pose a choking hazard to young children. Dispose of unused, loose, or easily removed small parts. Failure to do so could result in injury.
- **Do not** drill through or into window sill to install alarm wires.

Sealing

- Follow instructions of foam, sealant, and flashing manufacturers regarding safety, material application, compatibility, and periodic maintenance for continued weather resistance of their products. Failure to do so could result in product or property damage. **DO NOT** overfill between the frame and opening.
- Minimally expanding foam insulation must be compliant with AAMA 812-19.
- Quaker recommends 100% silicone (ASTM C920 compliant) neutral cure only sealant. Always clean all areas where sealant will be applied. Failure to do so could result in product or property damage.
- Flashing tape must meet ASTM-D779 performance requirements.
- Maintain a minimum of 1/4" between the window or door frame and exterior finish materials. Failure to do so could result in product or property damage.

Joining

- Do not join any window or door to any window or door not designed for joining. Joined windows and doors must be individually supported in the opening. Failure to do so could affect operation and product performance and could result in product or property damage.


Cleaning

- Acid solutions used for cleaning will damage glass, fasteners, hardware, and metal flashing. Protect these products and follow cleaning products manufacturers instructions. If acid contacts the window or door, wash all surfaces immediately with clean water.
- **Do not** use razor blades to clean glass surface. Glass damage could result.
- Clean glass using liquid glass cleaner.
- Clean frame, sash, panels, and insect screens using mild detergent and warm water with a soft cloth or brush.

IMPORTANT


- Buildings constructed prior to 1978 could contain lead paint which could be disturbed during window or door replacement. For more information on proper management of lead paint, go to: www.epa.gov/lead
- Care must be taken to properly recycle or dispose of old materials. Any recyclable materials should be separated from non-recyclable or hazardous materials. Please consult with local or state authorities regarding proper disposal of non-recyclable or hazardous materials.
- These are generic instructions intended to cover most common situations, which may not be appropriate for all installations due to building design, construction materials, or methods used and/or building or site conditions. Consult a contractor or architect for recommendations.
- Inspect all units for any damage or defects prior to installation. Contact the nearest Quaker distributor if there are any problems.

1

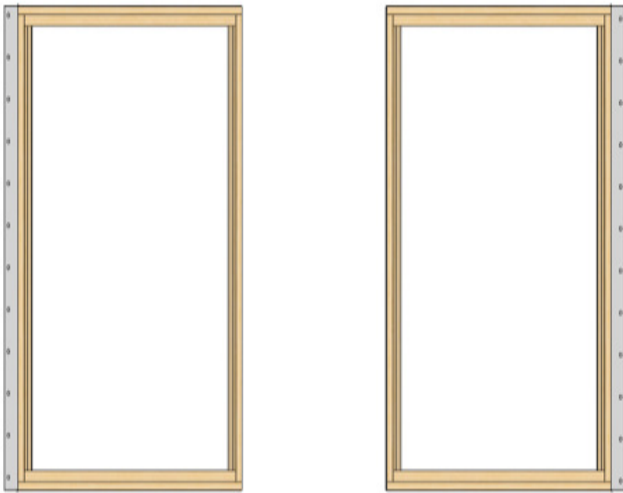


Lay the units down on a drop cloth or cardboard in the order they are to be mulled with exterior side down. Pull off the head, sill, and jamb nail fins from each unit where the mull will connect them.

2

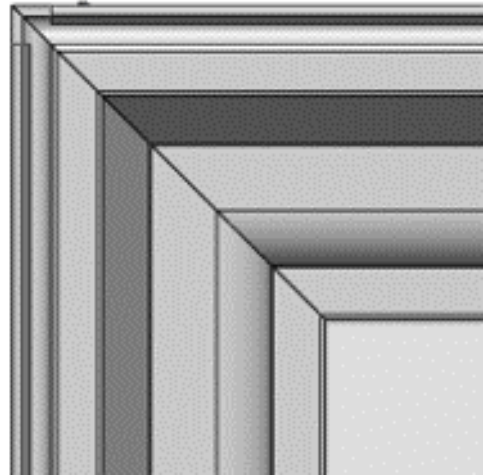


Cut a notch in the exterior clad accessory channels in the head and sill to allow for mull key to set flush. If not already done from the factory.

3

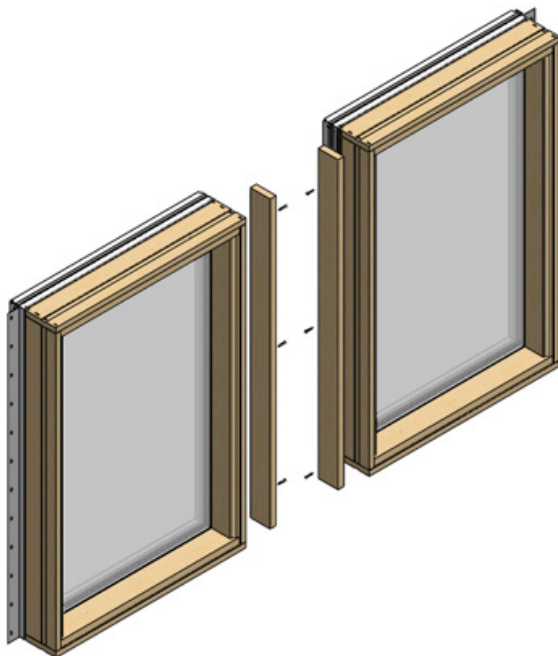

Install a 1 x 3 (for 2" mull) or 2 x 4 (for 4" mull) to each side of window frame to be mulled. Install the 1 x 3 or 2 x 4 ½" off the inside face of window to allow for plywood cap using wood screws.

4

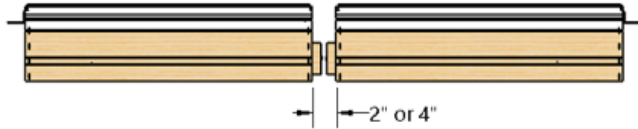


Move the window units together with a 2" (for 2" mull) or 4" (for 4" mull) gap to allow for plywood caps. Exterior side up.

5




Install the exterior side plywood cap using 1 1/4" screw with max spacing of 10".

6

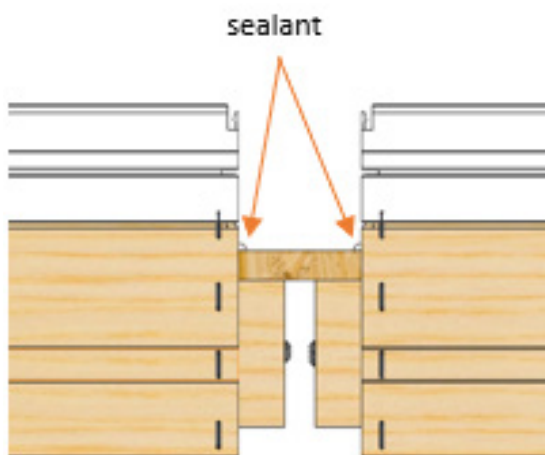


Place a bead of silicone sealant along both edges of plywood where it meets the window.

7

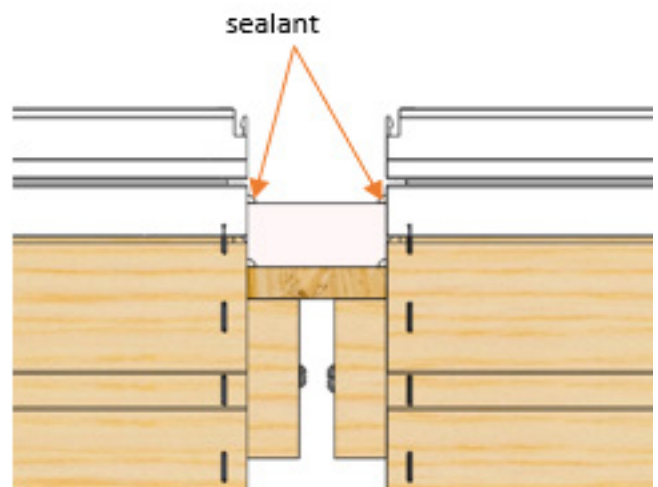



Install foam installation board over plywood and place a bead of silicon along the edges.

8

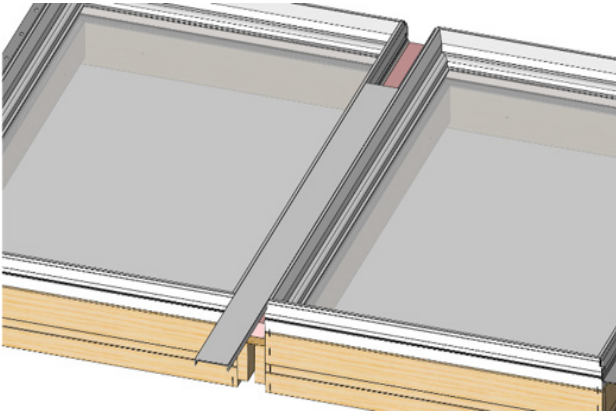


Slide the mull key in from one end.

9

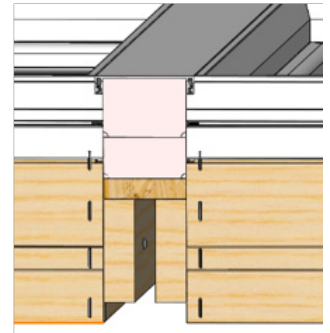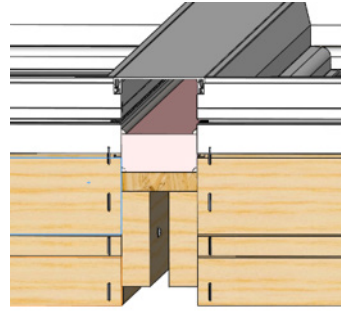


Fill gap between mull key and foam insulation with another piece of foam insulation as shown above.

10




Flip the units over and install the 2nd plywood cap using 1 1/4" screw with max spacing of 10".

11

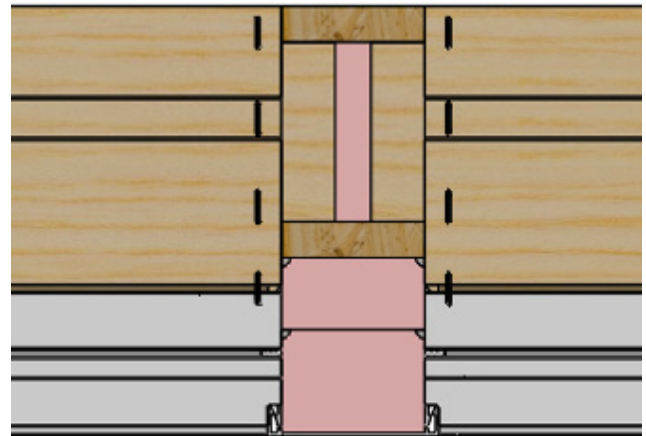


Insert another foam insulation piece to fill the gap between the two 1 x 3 or 2 x 4.

12

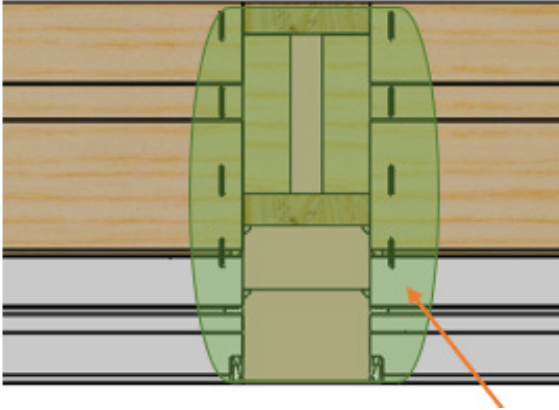

Fill all gaps in mull system with sealant on both ends of the mull.

13

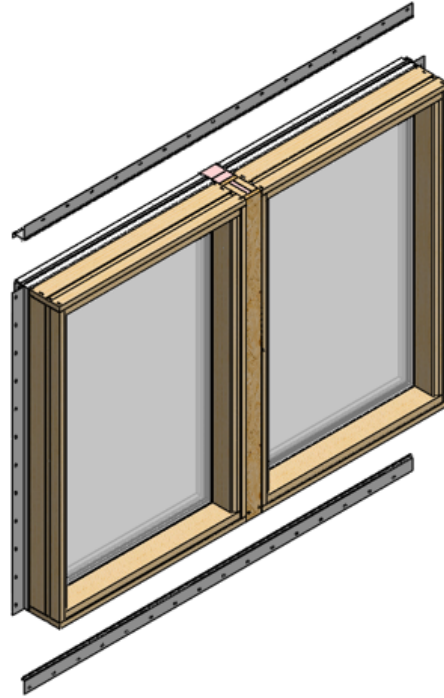

Install new full length head and sill nail fins.

14



Install one 4" flashing tape flush with interior face of window over the head mull gap.

15




Install another 4" flashing tape over lapping the other flashing tape and up the backside of nail fin.

16




Install mending plate centered over mull gap and staple or screw into place. (Do not use fasteners longer than $\frac{3}{4}$ ")

17

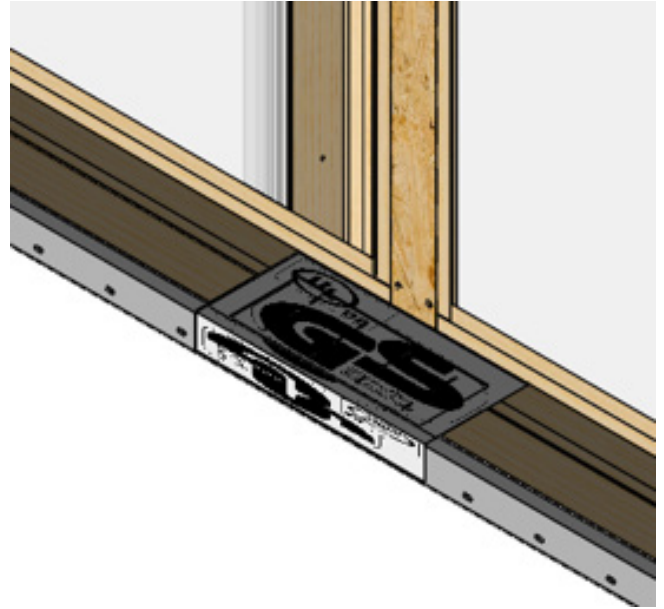

Repeat the last three steps for the other side of mull to finish.

18

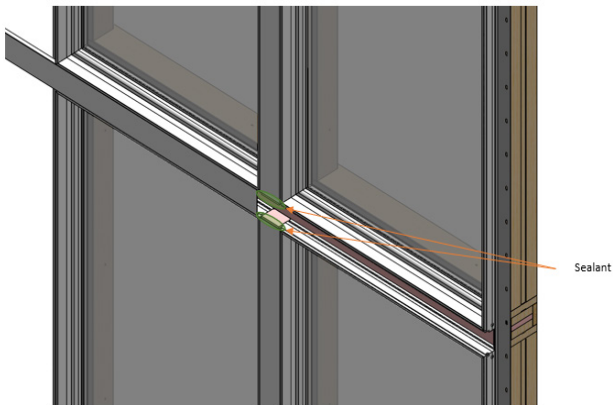

If there are horizontal and vertical mulls on the application, make sure that the joint where the two mulls meet is back bedded with a generous amount of sealant before sliding mull cap into place.



QWP part # IG-046

Installation Guidelines For All Wood Quaker Products With Field Spread Mull (2" & 4")

If this set of instructions doesn't match your installation method or wall conditions please check our website listed below for other options, or call the office.

Scan here for a digital version of these guidelines in English



Or go to: <https://www.quakercommercialwindows.com/resources/installation-instructions-english/>

Scan here for a digital version of these guidelines in Spanish



Or go to: <https://www.quakercommercialwindows.com/installation-instructions-spanish/>

